

Fixing Guide INTRAD CG2



General Information

INTRAD materials should be stored flat and protected against damage. Allow 24 hours for materials to reach ambient room temperature.

INTRAD CG2 Cornerguard can be fixed to concrete, brick, block, timber and steel using the recommended adhesive supplied by INTRAD.

STEP 1

Ensure that the wall surface is sound, dry and free from dirt, oil and grease. (Dusty surfaces should be sealed). Clean inside surfaces of CG2 cornerguard, ensuring they are clean, dry and free of grease.

STEP 2

Apply the recommended adhesive in four vertical beads along each inside surface of the cornerguard.



STEP 3

Offer the cornerguard to the wall, press firmly into position, and then remove. Wait for 5 minutes for the adhesive to air dry and then re-apply using maximum force.

Note: Factory cuts may not be perfectly square.

For areas where the wall surface is not sound or suitable for adhesive, mechanical anchor fixings should be used through the face of the cornerguard using washers and at staggered centres.

CG2

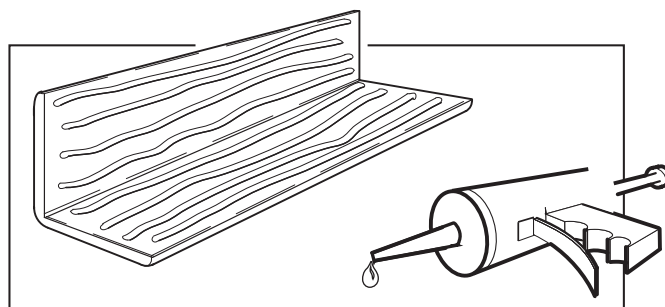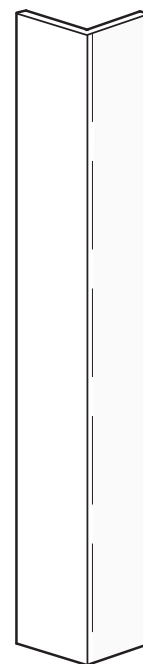

STEP 2