


Fixing Guide INTRAD CG44

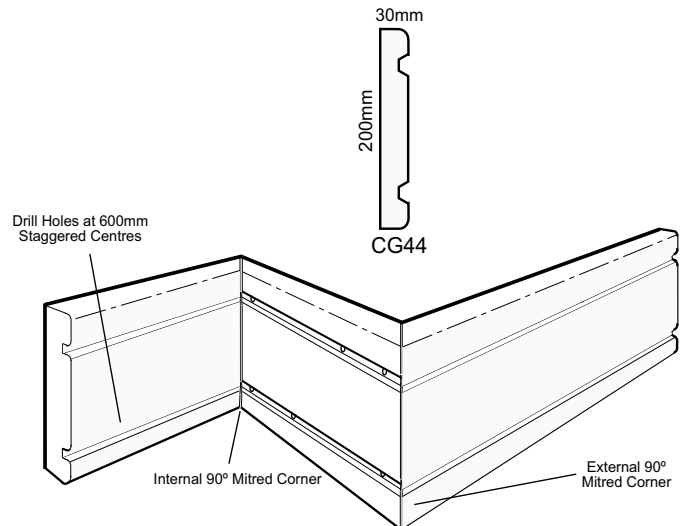

General Information

INTRAD materials should be stored flat and protected against damage. Allow 24 hours for materials to reach ambient room temperature.



STEP 1

Mark the wall at the required height.



STEP 2

Drill the wall guards at 600mm centres in the two recessed channels, staggering the position of the holes between the two channels.

Holes should be no more than 100mm in both channels from the butt joints, ends and corners. An Auger bit is recommended for the drilling, the size of which will depend on the fixings being used.



STEP 3

Mark the fixing position onto the wall and drill to accommodate the appropriate fixing.

STEP 4

Lengths of CG44 are butt jointed. Internal and external corners can be mitred or overlapped.

Cutting: Materials are supplied slightly oversize as factory cuts may not be square. Cutting butt joints on site should be carried out using a circular saw.

