


General Information

INTRAD materials should be stored flat and protected against damage. Allow 24 hours for materials to reach ambient room temperature.

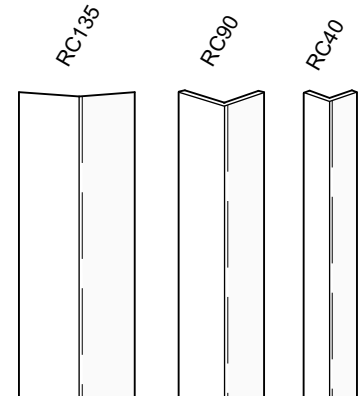

Installation Procedure using Double Sided Tape:

RC90, RC40, RC135,

Ideal for painted surfaces (not paper), plated and polished steel, laminates, tiles, plastic and sealed woods.



STEP 1

Cut materials to length required ensuring all cuts are square and burr free.



STEP 2

Ensure wall surfaces are clean, dry and free from dust and grease.

Note: Factory cuts may not be perfectly square.



STEP 3

Peel off backing tape from one leg, and only partially from second leg. Offer up to the wall and press firmly to ensure a good bond. Peel tape away from second leg and press firmly.



Remove tape from the other side and 'wrap' around the corner. Apply overall pressure to achieve a maximum bond

Installation Procedure using Adhesive:

RC90, RC40, RC135

Recommended for fixing to unsealed wood, sealed and unsealed plaster, sound block and brick


Follow steps 1-2 of double sided tape procedure and then follow:



STEP 3

Apply the recommended adhesive to each internal face of the corner protector as follows:

75 x 75mm - 3 nos 5mm beads per leg
40 x 40mm - 2 nos 5mm beads per leg

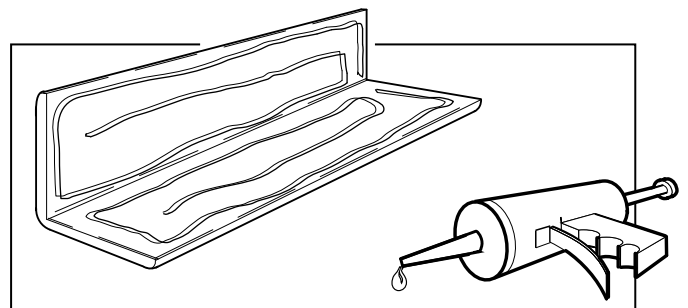

STEP 3



STEP 4

Offer the corner protector to the wall and push firmly into position and then remove. Wait for 5 minutes for the adhesive to air dry and re-apply the material using firm pressure. (This method ensures a strong bond).